



HONDA TECH MANUAL GX 120



**HONDA ENGINE RULES
GENERAL RACING RULES
SPECIFICALLY FOR 120 HONDA CLASS ONLY**

**First Issued:
Updated:**

**March 30, 1996
February 2008**

Dave Preston QMA Technical Director

HONDA CLAIM RULE - For GX120 QMA Type Engines

1. Claims will be from within the same division of class only, I.E., Jr. Sr. Lt. Hvy. 120 – Only competitors in the same division may make a claim on an engine. No claiming in Novice class. **One** claim per race event, per handler, per class.
2. Engines may be claimed for \$550.00 cash only. No claim related inspection will be started prior to the funds being posted with the proper official.
3. This claim form must be submitted to the Race Director, or his or her designee, before the end of the race that the claimed engine is participating in. I.E. Checkered flag lap complete.
4. The Race Director, or his or her designee, will hold the claim money until the claimed engine has been inspection for legality.
5. The claimed engine will be tagged/marked and sealed as soon as it comes across the scale.
6. The claimed engine will be immediately taken to impound and/or presented to the tech director for inspection. Engine must remain in impound and in the possession of tech officials throughout the entire process including shipping to National Tech Director and the transferring of funds.
7. Inspection of claimed engine **MAY NOT** be waived by any party.
8. Both claimer and claimed have the option to be present at the time of inspection.
9. Any claim that is withdrawn will be assessed a \$50.00 fee that will be paid to the host Club
10. Multiple claims on an engine will be decided via a lottery system. Owner, Handler or family member cannot claim his or her own engine.
11. Claimed party will retain air filter, exhaust system and throttle linkage.
12. If the claimed engine is found to be illegal, the motor must be completely torn down to check for additional illegalities. The Tech Director and or the Race Director must confiscate ALL illegal parts and related parts from the claimed engine and shall immediately forward them to the National Tech Director. Use confiscation form if necessary. Claiming party has the option to accept the engine, as is, less confiscated parts or void the claim if engine is found illegal and claim money will be returned to the person filing the claim.
13. Refusal of claim, destroying or withholding of parts, or any other lack of cooperation in this claim or inspection process will be interpreted as an admission that the engine is illegal and will subject the driver and handler to the conditions set forth in the Honda Suspension Program.
14. Any claimed Honda engine, part or parts which are deemed to be at maximum wear limits is subject to confiscation but not DQ'able. The claiming party has the option to void the claim with no financial penalty.
15. Note: Reference to Wear Limits in "*Engine Block Internal*" section of both Honda Manuals.

HONDA SUSPENSIONS

- 1 Handlers and drivers guilty of having a Honda engine declared illegal at technical inspection shall be disciplined as follows:
 - 1.A First offense – 30 day suspension for handler and driver from participating in the respective Honda class.
 - 1.B Second offense within one year of first infraction – one-year suspension for handler and driver from participating in the respective Honda class.
 - 1.C Third Offense within two years of last infraction – suspended for life from QMA.
- 2 Suspension will begin immediately, (unless there is an appeal) at which point the illegal part/s will be sent within five days to the Region Tech Director or designee for review. If the part/s are found illegal at this point the suspension will start at that time by the Region Tech notifying the person. Verified illegal parts will be sent to the National Tech Director, legal parts will be returned to person.
- 3 Suspension for life is open to review by the QMA National Board.
- 4 For the purposes of this rule only, if a handler has multiple cars competing in the Honda class (GX120 or GX160) at one race event and more than one engine is found to be illegal at that event, it will be considered to be one offense.
- 5 Refusal of tech shall be interpreted as an admission that the engine is illegal and a suspension from the Honda class will be immediate with all awards, qualifications being revoked.
- 6 Confiscation of part or parts - only the illegal part and all related parts and not the whole motor will be confiscated. A full motor tear down is required if an illegal part is found.
- 7 **Novice Honda:**

The novice program and its implementation fall under the Regional Directors. Therefore illegal Honda engine parts will be confiscated but the suspension will not be levied against handlers or drivers for the first offense only.

GENERAL RULES

1. Only stock Honda GX120K1HX2 engine and gearbox will be used in this class. All parts will be stock Honda specifically made for the Honda GX120K1 HX2. U.S. = GCAHK. Canada = GCAAT
2. All stock Honda parts must be used and properly installed with the following exceptions:
 - A. Governor system may be partially or fully removed with the exception of the steel drive gear on the crankshaft. This gear must remain intact. If shaft is removed hole must be plugged. Hole can be tapped for thread or epoxy. No welding.
 - B. Factory air cleaner must be removed. Any air filter may be attached to the outside of air filter adapter. Outer wear style or equivalent can be used over carburetor only with no adapter. The approved air filter adapter may be run with or without an air filter. Any air filter may be used with adapter as long as there are no devices inside the air filter or adapter. (I.E. Springs not allowed) Hose from valve cover must go into a catch can. (We are using “outerwear” to define a style not brand name).
 1. The use of air filters during qualifying at asphalt and dirt events is illegal. The Senior Tech. Official reserves the right to allow filters at any event that it’s deemed necessary.
 - C. Stock Honda fuel tank must be removed.
 - D. Recoil starter must be removed. Pull cup may be cut down for washer. Must use original Cup.
 - E. Exhaust: Stock Honda muffler will be removed. Mounting flange may be cut off of muffler and used as adapter flange. Any transition from the “D” shape of the exhaust port to round must take place within the thickness (0.250” max.) of the flange. This applies to all exhaust systems. No steps or tapers allowed, grind marks are allowed past .25” flange area. No suspension for exhaust flange or pipe infraction just disqualification. If an after market flange is used, maximum allowable flange thickness will be 0.250 inches. If slip on type flange assembly is used, pipe stub will be a maximum 0.880 inches outside diameter tubing with a maximum overall length of 1.500” inches. Pipe stub must be inserted into exhaust pipe at least 0.750 inches and will have minimal exhaust leakage. Muffler to be used will be 4 to 8 hp Briggs & Stratton, part number 294599 or equal equivalent. Muffler will be internally unaltered except that the round cup shaped baffle may be welded to the perforated baffle without moving it’s original location. Threads will not be removed from muffler. Exhaust pipe will be a maximum of 1.000” inches outside diameter with a length of 20.0” to 26.0” including a threaded pipe coupler to welded to the end of the pipe in order to screw muffler in place so that muffler may be removed for inspection. Pipe coupler will be a standard, unaltered, ¾” NP, threaded coupler. Length will be 1.000” inches minimum to 2.250” inches maximum. There will be no steps or tapers in exhaust pipe or flange assembly. Exhaust pipe length will be measured by using a small diameter hose inserted through pipe to measure over all length. Flange and coupler will be included in the overall length when measuring pipe. No coating of any type may be applied to the interior of any part of the exhaust system. The intent of this rule is to have all of the exhaust pass through the muffler. All measurements are to be taken with the component pieces in the same position as they were installed and on the car.
 1. All QMA ¼ midget mufflers must be Briggs & Stratton Part # 294599 or equivalent. No drilling holes in the baffles. Inside seam of baffle must be straight edged. (NOTE: Some seams may not be parallel in baffle) You cannot cut off the threaded flange if it is to be used in Honda. It is OK to weld a washer or nut on the flange for a place to apply safety wire.
 - F. Choke butterfly and shaft must be removed. Hole may be filled only with silicone. Or old shaft cut down.
 - G. Oil level switch may be disconnected but switch assembly must remain intact in crankcase.
 - H. Gearbox may be rotated to any desired position.
 - I. Main jet in carburetor may be a maximum of #65.
 - J. Off-On ignition switch may be removed, and hole covered. (any material; no welding)
 - K. All pin measuring gauges are plus tolerance.
 - L. Exhaust oxygen sensor or temp. sensor attached to any part of Honda exhaust system is illegal.
 - M. Valve seals are illegal.
 - N. Cryogenics of any Honda part is illegal.
 - O. Note: Taking parts out of service. Reference: Wear Limits in Engine Block Internal section.
 - P. DQ Only – Not Suspension for: Exhaust, Air Filter Adapter, Spark Plug.
 - Q. Shroud may be factory RED or BLACK.


TECH PROCEDURE

Modifications or machining of any parts in order to bring them to stated minimum or maximum specs (blueprinting) is not legal.

- External visual check of engine for required components: Pipe and muffler, shrouds and sheet metal, oil level sensor (this can be partially observed from outside).

NOTES:

- Factory air cleaner must be removed. Any air filter may be attached to the outside of air filter adapter. Outer wear style or equivalent can be used over carburetor only with no adapter. The approved air filter adapter may be run with or without an air filter. Any air filter may be used with adapter as long as there are no device(s) may be used inside the air filter or adapter that will alter the airflow into the carburetor (I.E. Springs not allowed) Hose from valve cover must go into a catch can. (We are using "outerwear" to define a style not brand name).
 - Air cleaner adapter will be maximum ID 2.250" and a maximum of 1.375" long in length, flange thickness 0.375" max. flange ID 1.000" minimum hole size straight walled, flat bottomed and parallel with carburetor using existing air cleaner mount holes.
 - The use of air filters during qualifying at asphalt and dirt events is illegal. The Senior Tech. Official reserves the right to allow filters at any event that it's deemed necessary.

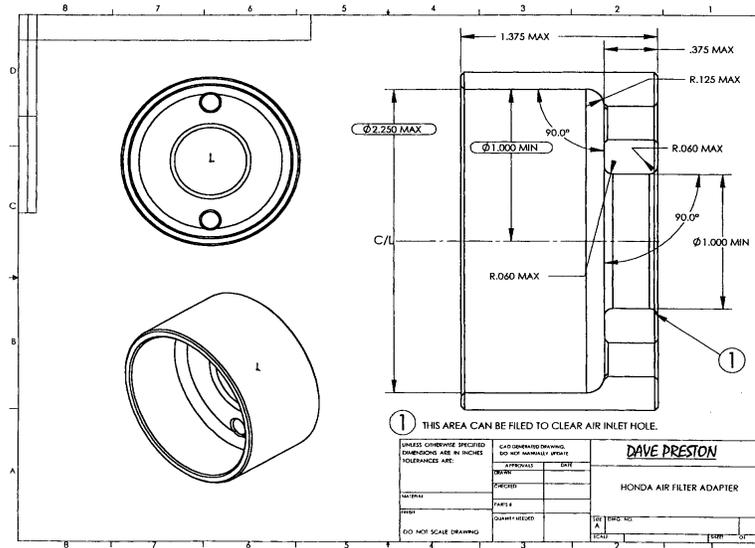

- Any type throttle linkage may be utilized. Carburetor will be unaltered with the exception of the black plastic piece on upper end of throttle shaft, this is the only part in the carburetor that can be altered.
- Rear mounting brackets for Honda fuel tank may be removed.
- The starter cup that is behind the flywheel retaining nut can be cut away to leave only the flat washer back piece that retains cooling fan.
- The keyed end of the sun gear shaft may be shortened, drilled and tapped or machined for snap
- Heli-coiling threads for shrouds (all), valve cover, existing throttle mounting holes, oil drain, and fill holes, one of the coil bolts, and side cover bolts is allowed. Dowel holes are not to be modified or relocated, also one carburetor mounting bolt.
- Honing and deglazing of the bore is allowed.
- Lapping the valves is allowed.
- Blocking Air Flow:** No device may be used that will/or appear that it may impede air flow into the engine cooling system. This may require that the engine be run at a speed above idle by the tech personnel at the scale after the car has qualified or raced.

CARBURETOR

Remove Carburetor:

- Check for restrictor, if applicable, and placement. Restrictor must be installed between carburetor and carburetor insulator with stock Honda gasket on each side of restrictor. Only stock Honda insulator gasket between black plastic insulator and head. Air passageway in insulator will not be altered in anyway. All Junior Honda's must use the blue QMA approved slotted plate only. Failure to use proper restrictor plate, alteration of restrictor plate, or improper installation of plate in designated classes is cause for immediate DQ and all applicable suspensions will be applied.



1. Gasket thickness: 0.025" maximum.
2. Restrictor thickness: 0.0625" maximum. No slotting of holes on any Honda restrictor.
3. Insulator gasket thickness: 0.025" maximum.
4. Novice Restrictor hole size: 0.3125" maximum (red).
5. Junior Restrictor hole size: 0.4375" maximum (blue).

- B. Check for any alterations or worn parts that would allow additional air into engine: holes, slots, perforations, spacers, loose bolts, warped flanges etc.
- C. Carburetor identification number: BE 60 B
- D. Check carburetor for alterations. Upper choke shaft hole may be sealed with silicone type sealer.
- E. Two stock Honda intake gaskets may be used between Carburetor and plastic insulator.
- F. Carburetor Bore:

Intake end: maximum diameter 0.950"
Throttle end: maximum diameter 0.632".

- G. Carburetor venturi bore: 0.456" no go. This measurement is best made with a no go gauge but may be made using a telescoping gauge as a no go.



H. Main jet and main nozzle: **(MUST BE TIGHT)**

Main jet size: maximum #65 (0.0256") check with #71 (0.026") no go.

Main air jet: 0.0394" maximum #60 (0.040") no go - at back of hole.

Main jet access passage: 0.094" maximum #41 (0.096") no go.

Main nozzle:

1. Main nozzle bore 0.069" maximum #50 (0.070") no go.
2. Main nozzle will be checked with a NOGO Gauge (0.429") If gauge goes over dump tube – carb is illegal.. This is best measured using a 0.452" rod type gauge with a 0.429" flat area to be used as a go gauge.
3. Air vent holes on the side of the main nozzle must not be plugged.



CYLINDER HEAD, HEAD GASKET, VALVES, SPRINGS

Remove cylinder head.

Head gasket thickness: 0.040" minimum thickness of inner rim.

Measure from head surface to top of valve head:

| | | |
|----------|----------------|----------------|
| Intake: | maximum 0.210" | minimum 0.178" |
| Exhaust: | maximum 0.210" | minimum 0.178" |

This is best done with a depth micrometer or a bridge type dial indicator. Bridge type does not require removing carbon from head surface. See photo on next page.

Combustion chamber cc: 10cc ref. with stock spark plug.



Remove valves:

Retainer:

- A. Inspect retainers for alteration that would increase valve spring pressure. Both intake and exhaust must have stock Honda retainers. Exhaust valve only can have lash cap and corresponding retainer.
- B. Thickness of retainer will be:
 - Intake: 0.228" minimum
 - Exhaust: 0.241" minimum
- C. Flange thickness of retainer will be:
 - Intake: 0.110" maximum
 - Exhaust: 0.070" maximum
- D. From flat of flange to machined surface:
 - Intake: 0.148" minimum
 - Exhaust: 0.165" minimum
- E. All Valve oil seals must be removed.
 - 1. The use of valve seals is illegal and will result in applicable suspension per Honda suspension program.

VALVE SPRINGS

Valve springs will be stock Honda springs and will not be altered in any way.

- A. Wire diameter: 0.071" maximum
- B. Outside diameter of spring: 0.790" maximum
- C. Number of total coils: 5.3
- D. Spring pressure: 11 LBS maximum at 0.812"
- E. Stacked length will be: 0.394" maximum



ROCKER ARMS - PUSH RODS - STUDS

Rocker arms will be stock Honda and will not be altered in any way. Rocker arm studs will be stock Honda. They or their mounting position may not be altered in any manner. No heli-coiling of mounting holes. No bending of studs. Push rods will be stock Honda and will not be altered in any way. Push rod length will be Maximum 4.799"- 4.770".

VALVES



- A. Check valves for dimensions and weight. Valve seating surface must be factory ground to a single angle only, 45 degrees. There will be no other angles ground on any part of valve. Valves must not be polished, lightened or altered in any way.

- B. Valve weight:

Intake 18 grams minimum

Exhaust 16 grams minimum

- C. Drawing of valve dimensions (Intake Valve followed by Exhaust Valve)

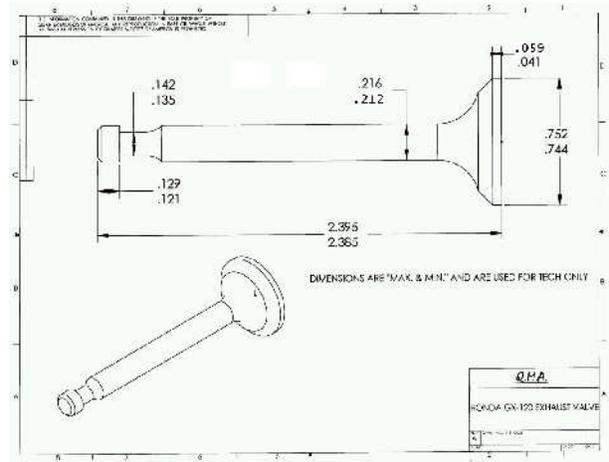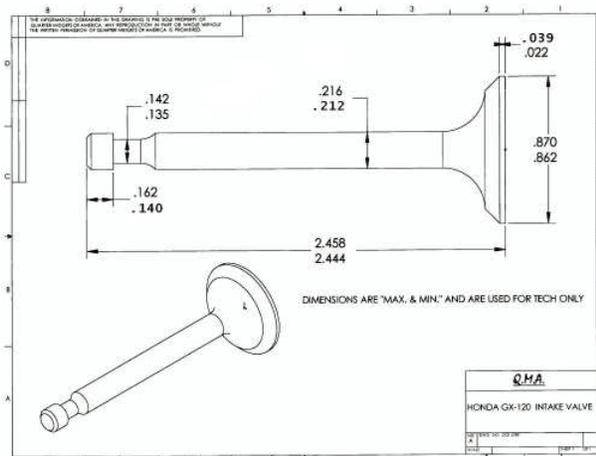

HEAD

Cylinder head will be in "as cast" and in factory machined condition and there must be no addition or subtraction of metal or any other substance to the inside or outside of the cylinder head. This includes no type of machining or grinding to increase

compression or airflow. No milling, angle milling, etc. or any alteration that could increase valve spring pressure. Note: Do not use abrasive material in cleaning head and cylinder deck that will alter factory finish.

A. Measure from flat of head surface down to valve seat. This dimension will be:

A1. Latest head cylinder number: 12210-ZH7-415

Maximum 0.265" Minimum 0.250"

B. Measure from surface of head to top of valve guide.

This dimension will be: 0.925" Max.

Intake 0.925 Max.

Exhaust 0.905 Max.



C. Measure from surface of head to lowest machined area in the bowl of the port. This dimension will be:

Intake: 1.064" maximum

Exhaust: 1.010" maximum

D. Thickness of head. This will be measured from valve cover surface to head gasket surface at the side at a position in line with upper intake & exhaust flange bolt.

Maximum 2.917"

Minimum 0.2911"

Note: Most heads in the field have a thickness of 2.914.

INTAKE AND EXHAUST PORTS

A. Ports will be in "as cast" and factory machined condition and there must be no addition or subtraction of metal or any other substance to the inside or outside of the cylinder head.

B. No alterations of any kind to be made to the intake or exhaust port.

C. This includes any grinding, polishing, etching, sand blasting or glass beading to interior surface.

D. Valve seats must be a stock single 45 degree angle. Multi angle valve seats are not permitted. Valve seats must not be replaced.

E. Intake and Exhaust ports at valve:

Intake: maximum 0.752" minimum 0.745"

Exhaust: maximum 0.675" minimum 0.665"

Note: Cleaning of the combustion chamber or changing the finish of such chamber is illegal.

ENGINE BLOCK

This engine block must be in "as cast" and factory machined condition. There must be no addition or subtraction of metal or any other substance to the inside or outside of the cylinder block, crankcase cover, crankshaft, rod, piston, pin, rings, flywheel or coil with the following exceptions:

A. Removal of rear gas tanks brackets is permitted.

- B. Removal of governor. Governor system may be partially removed with the exception of the steel gear on the crankshaft. This gear must remain intact. Governor arm and shaft may be removed, tied forward or altered to accommodate throttle linkage or return springs.
- C. Addition of brackets, fittings etc. to accommodate throttle linkage, tachometer, temperature gauge is allowed.

Check bore: 2.365" maximum NOTE: *All measurements taken at top of bore or very bottom of bore.*

“Wear Limits/Parts Out Of Service” QMA reserves the right to confiscate 120 Honda engine parts deemed illegal or at QMA maximum wear limits. EXAMPLE: Cylinder Bore will be 2.365 Max. All measurements taken at top of bore or very bottom of bore parallel to crank, 90 degrees from crank. Any cylinder block that has one measurement over QMA maximum wear limits will be taken out of service. If no measurements exceed QMA maximum wear limits the part of block will not be confiscated. Handler has the right to have confiscated parts returned to them but will be rendered unusable.


Use dial caliper to check bore.

Check stroke: 1.659" Maximum 1.640" Minimum

Measure amount that piston is up or down from block surface at T.D.C. This will be measured at edge or highest part of piston, not in center or relieved area. This dimension will be:

0.000" Max. – NO PISTON POP UP

Install degree wheel on flywheel. Install pointer in order to read degrees. Locate accurate T.D.C. This should be done with a positive stop type fixture and not established with indicator alone.

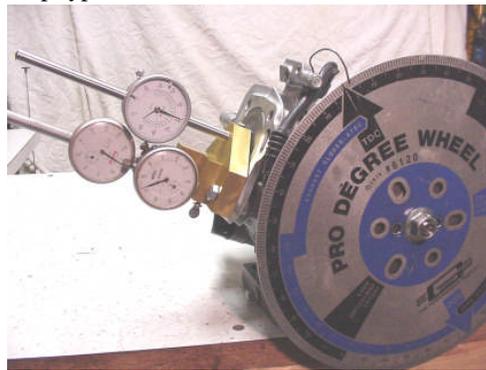

Cam will be checked with indicator reading off the top end of tappets which will provide zero clearance. The inverted radius of the top of the tappet presents some problem to get accurate readings and to prevent binding of indicator stem. Indicator holder and positions are very critical in this operation.

Zero indicator on base circle of cam. Be sure that compression release does not effect zeroing exhaust indicator. (Zero dial indicator after exhaust bump) ref.

Turning engine in normal rotation, clockwise facing flywheel, take reading at specified opening. Readings must fall between specified degrees on the following chart.

| CAMSHAFT PROFILE LIMITS | | | | | | |
|--------------------------------|----------------|------|--|---------------|---------------------|------|
| IN TAKE | | | | EXHAUST | | |
| | Degrees | | | | Degrees | |
| 0.050" | 10.5 to 14 | ATDC | | 0.050" | 207 to 210.5 | BTDC |
| 0.100" | 26.5 to 30 | ATDC | | 0.100" | 190 to 193.5 | BTDC |
| 0.150" | 45 to 48.5 | ATDC | | 0.150" | 170.5 to 174.5 | BTDC |
| 0.180 Split | | | | 0.180 Split | | |
| 0.200" | 71 to 74.5 | ATDC | | 0.200" | 144 to 148 | BTDC |
| Maxlift .227" | Peak 104 - 107 | ATDC | | Maxlift .229" | Peak 107.5 - 110.5" | BTDC |
| 0.200" | 136 to 141 | ATDC | | 0.200" | 70.5 to 73.5 | BTDC |
| 0.180 Split | | | | 0.180 Split | | |
| 0.150" | 162.5 to 167 | ATDC | | 0.150" | 44.5 to 47.5 | BTDC |
| 0.100" | 180.5 to 185 | ATDC | | 0.100" | 26 to 29.5 | BTDC |
| 0.050" | 197.5 to 201 | ATDC | | 0.050" | 9 to 12.5 | BTDC |

FLYWHEEL, FAN AND IGNITION SYSTEM


Caution should be used when removing flywheel. Do not hit with hammer or other heavy objects. Service manual show flywheel to be removed with commercially available 6" puller. Another method is inertia type knocker that threads onto crankshaft end.

The transistorized magneto ignition is fixed at 20 degrees BTDC and may not be altered in anyway. Firing must not exceed 66.5" or 20 degrees BTDC.


Quick check: Turning flywheel clockwise-if the leading edge of the depression of flywheel rim where the magnet is mounted is not still under the right hand coil leg at 65" BTDC, it is probably illegal and should be checked further. If timing needs to be checked further see page 19.




- A. Flywheel keyway or its position must not be altered.
- B. Key may not be deleted or altered in any way. You must run a QMA approved key for timing on old style engines with out tier flywheel.
- C. Magnet and its position may not be altered in any way. Tier III magnet black, Old style magnet white.
- D. Magnet retaining screw may not be altered in any way. Screw may not be replaced with larger or smaller screw. No heli-coiling of mounting hole.

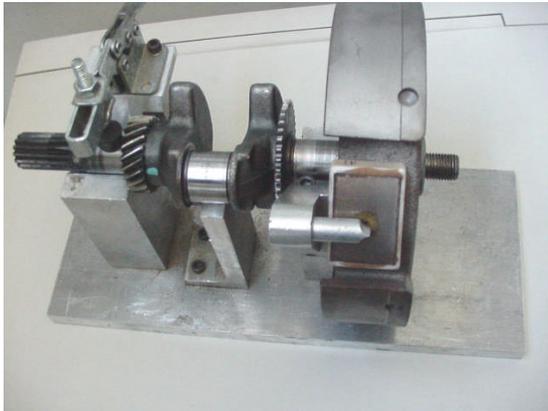

- E. Ignition coil or its position, other than air gap, may not be altered in any way. Coil mounting bolts must be stock and cannot be altered in any way to advance or retard timing. Coil attaching bolts will be stock 6mm cap screw 1-1/16" long. There can be no more than 3/8" of unthreaded portion of bolt that does not measure 0.230" diameter. This restricts movement of coil to a position that could make ignition timing illegal. If a coil support mount becomes stripped, it is permissible to heli-coil. However, only one leg may be repaired, if both legs are heli-coiled, the block becomes illegal.
- F. All nylon blades on the cooling fan

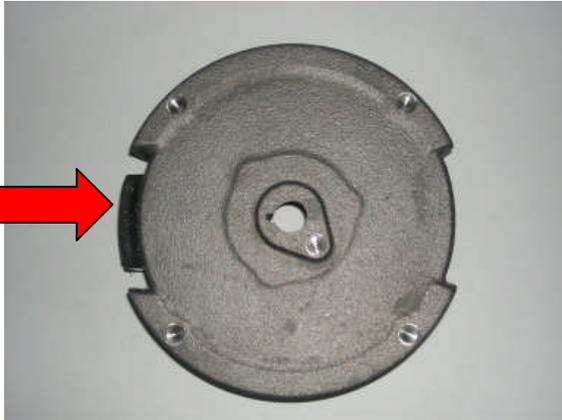

TIER III: Black

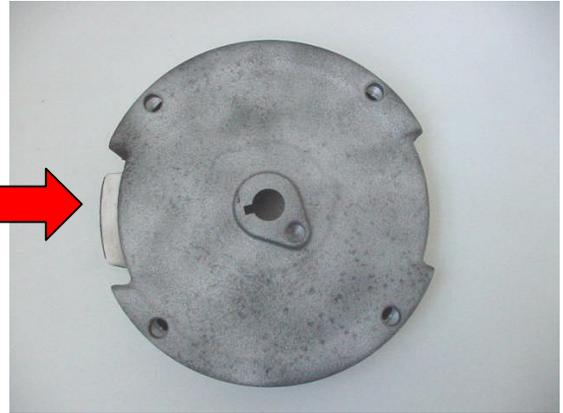

OLD STYLE: White

- G. No metal removal or addition to flywheel is permitted.

Flywheel weight will be: 1642 grams minimum 58.2 oz

Flywheel diameter - magnet area: 6.285" minimum

- H. A stock Honda spark plug cap, (wire end at resistor), must be used.
 I. Any automotive type spark plug with 3/4" reach maximum is allowed.
 J. Ignition coil air gap is no longer a tech item. Stated dimensions are recommended for safe operation will be: 0.008" minimum - 0.024" maximum.
 K. No plug indexing washers allowed.
 L. If temperature sensor is used under spark plug, factory washer may be removed.

GEAR BOX AND RING GEAR

- A. Gear box may not be altered in any way. May be rotated to desired position.
 B. Ring gear may not be altered in any way with the exception of the keyed end of shaft that may be shortened, drilled and tapped or machined for snap ring groove. No other machining, drilling, grinding etc. to ring gear. Keyway may be cut deeper.
 C. Ring gear may not be altered in any way including polishing or use of any compound or abrasive on gear shaft where bearings ride.



CRANKCASE COVER

Remove crankcase cover.


- A. Cover must be in “as cast” and factory machined condition and there must be no addition or subtraction of metal or any other substance to crankcase cover.
- B. Crankcase cover gasket must be stock Honda. Only one gasket may be installed with a maximum thickness of 0.025”.
- C. Critical dimensions are - thrust face of camshaft holder and position of crank bearing. Place a straight edge over crank bearing and cam boss thrust face. These surfaces should be level. Maximum tolerance will be ± 0.005 ”. There will be no alterations to crankcase cover. This excludes any alteration to crank bearing and camshaft holder position and height in an attempt to alter valve timing.

PISTON - WRIST PIN AND PISTON RINGS

Remove rod and piston – triangle or boss on top of piston must point toward push rods - piston, wrist pin and rings must be absolutely stock and not altered in any manner.



TIER III- Round Boss

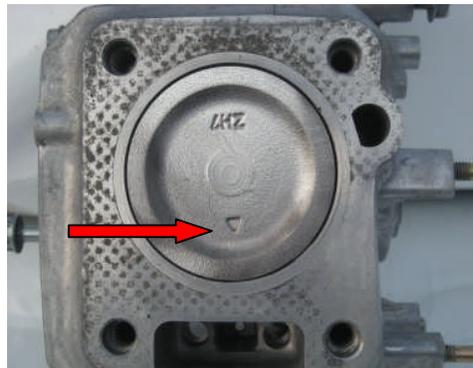


OLD STYLE- Triangle




PISTON NOTES

Piston will be stock Honda standard size and will not be altered in any way.

- A. Oversized pistons must not be used.
- B. All three piston rings must be used and installed properly.
 - 1. Top ring: Chrome compression ring installed with “N” or “T” on rail up. No expander under ring.
 - 2. Middle ring: Oil scraper ring installed with “N” or “T” on rail up. No expander under ring.
 - 3. Bottom ring: Three (3) piece oil rings are allowed.
- C. Piston may not be knurled, grooved or coated.
- D. Piston weight: 106 grams minimum.
- E. Total Piston weight: With rings, pin, and clips - 121 grams minimum.
- F. Total Piston weight with rings, retainers, complete with rod, pins and bolts 263 grams minimum.
- G. See drawing for dimensions

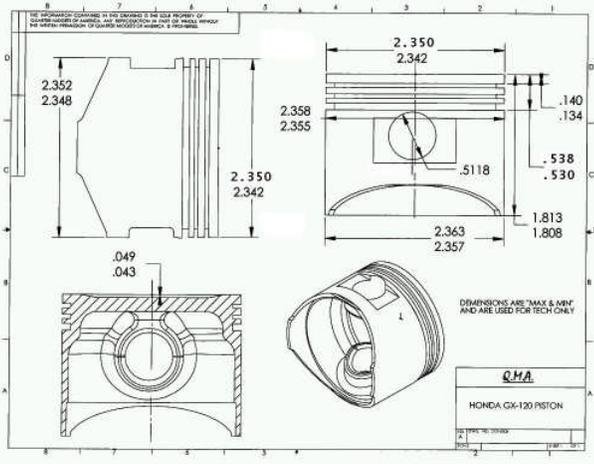

OLD STYLE

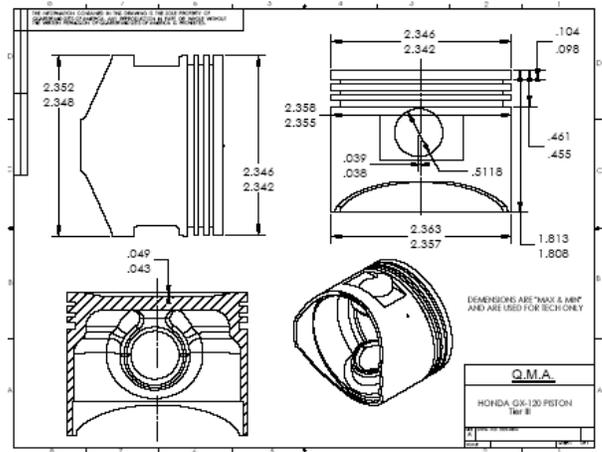

TIER III

RINGS

- A. Must be stock Honda rings with stock size and configuration.
- B. No decreasing of ring tension by heating, machining or any other means.
- C. Ring thickness:


| | |
|---|--|
| <p>OLD STYLE: Compression: 0.056" min. Scraper: 0.056" min.</p> | <p>TIER III: Compression: 0.038" min. Scraper: 0.038" min.</p> |
|---|--|

Oil Ring: 3 piece lower 0.095" min. 1 piece 0.097" min.

WRIST PIN

- Stock Honda wrist pin and retainer

| | |
|---------|------------------|
| OD: | 0.511 ref. |
| Length: | 1.854" ± 0.010" |
| ID: | 0.354" |
| Weight: | 23 grams minimum |

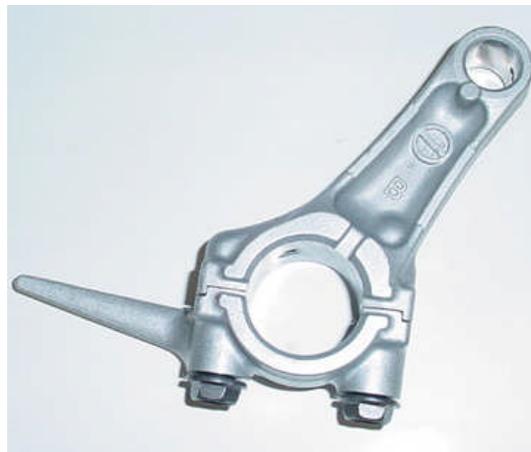

CONNECTING ROD

- Stock Honda rod with no alterations.
 - A. Connecting rod big end size: 1.021" minimum - 1.0265" maximum
 - B. Pin end bore is 0.5111 ref.
 - C. Length from bottom of pin bore to top of big end bore will be:

| | |
|----------------|----------------|
| 2.111" maximum | 2.101" minimum |
|----------------|----------------|

- D. Rod weight with bolts: 119 grams or 4.2 oz minimum
- E. No oil grooves on bearing surface of either end.

CRANKSHAFT

Stock Honda crankshaft with no alterations.

Notes:

- A. No removal or addition of any metal from or to the crankshaft is allowed.
- B. No balancing of the crank is allowed.
- C. No oil grooving is allowed on the crank journal.
- D. Governor drive gear can not be removed.
- E. E. Crankshaft drive gear should not be removed. This gear is installed by Honda to any accuracy of $\pm \frac{1}{2}$ degree. If this gear is not installed to this degree of accuracy, engine may not be legal when camshaft is checked by the procedure under engine block.
- F. Keyway location must not be altered in any manner.
- G. Measure thrust to crank gear side: 3.345 Min.
- H. Factory heat treating markings must be present on gearbox end of crankshaft and must be evident on all non –contact areas . The only cleaning method allowed is on the flywheel side of crankshaft for the purpose of removing calcium, rust etc. from the exposed end of the crankshaft. This Is permitted only from the seal groove out to the end of the thread of the crankshaft where the flywheel bolts on. Only a wire wheel may be used in the cleaning process. The use of Scotchbrite, sandpaper or any other compounds or abrasives is illegal. No material may be added or removed from crankshaft. Crankshaft main journal at flywheel and gearbox ends may not be altered in any way.


NOTE: Refer to photo of crank color. See arrow.

CAMSHAFT

Camshaft must be stock Honda with no alteration of any kind.

Notes:

- A. There will be no additions to or subtractions from any part of the camshaft.
- B. Compression release will remain intact and unaltered.
- C. Lobe center angle will not be altered by any means.
- D. Lobe profile will not be altered in any way.

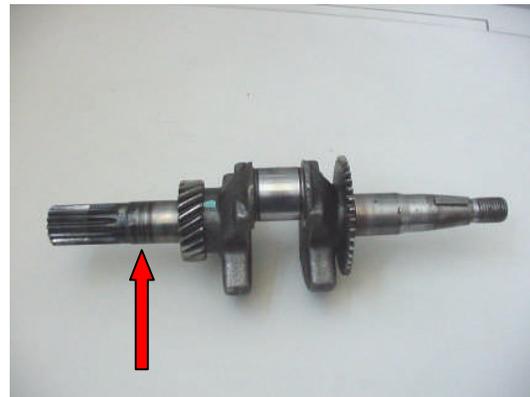

CAMSHAFT SPECIFICATIONS

INTAKE

Heel to Heel 0.864” - 0.869”
 Heel to Peak 1.079” - 1.093”

Length - thrust flange to thrust flange:
 3.137” minimum 3.142” maximum
 Cam bearings are 0.547” - 0.551” and unaltered

EXHAUST

Heel to Heel 0.865” - 0.870”
 Heel to Peak 1.081” - 1.095”

TAPPETS


- A. Tappets must be stock Honda with no alterations.

- B. Base diameter:
0.910" minimum no maximum spec
- C. Stem diameter:
0.312 minimum
- D. Base thickness:
0.076" minimum 0.090" maximum
- E. Length:
1.181" minimum 1.220 maximum
- F. Weight: 16 grams minimum

ENGINE BLOCK INTERNAL

The engine block must be in an "as cast" and factory machined condition and there must be no addition or subtraction of metal or any other substance to the inside or outside of the block.

- A. Cylinder bore will be 2.365" maximum. NOTE: All measurements taken at top of bore or very bottom of bore.
 - 1. **"Wear Limits/Parts Out Of Service"** QMA reserves the right to confiscate 120 Honda engine parts deemed illegal or at QMA maximum wear limits. EXAMPLE: Cylinder Bore will be 2.365 Max. All measurements taken at top of bore or very bottom of bore parallel to crank, 90 degrees from crank. Any cylinder block that has one measurement over QMA maximum wear limits will be taken out of service. If no measurements exceed QMA maximum wear limits the part of block will not be confiscated. Handler has the right to have confiscated parts returned to them but will be rendered unusable.
- B. Cylinder bore will not be bored oversize.
- C. Cylinder bore will not be re-sleeved.
- D. Cylinder bore position will not be moved or tipped in any manner.
- E. Cylinder block deck will not be resurfaced by any means. There will be no polishing, sand-blasting or glass beading to any interior surface.
- F. Deck height:
4.527" minimum 4.532" maximum
- G. Machined surface of block down to thrust face of cam boss:
3.228" minimum 3.240" maximum
- H. Machined surface of block down to bearing face:
3.430" minimum 3.442" maximum
- I. Oil level sensor will be intact and unaltered. Wires may be externally disconnected or cut off.

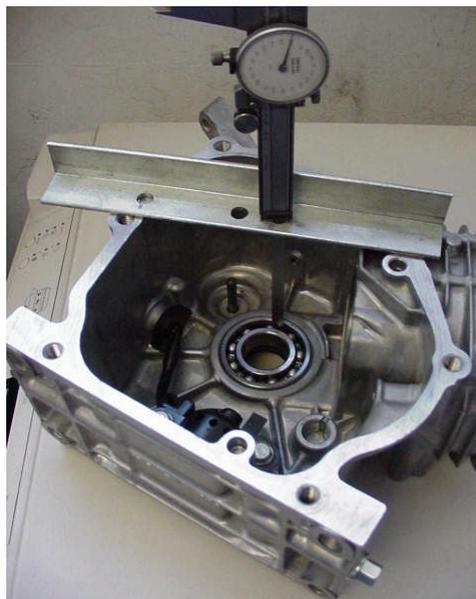

PROCEDURE FOR CHECKING TIMING

- A. With degree wheel or indicator located at 0 degrees or TDC., mark both the flywheel and some fixed point (such as right hand side of aluminum block casting right above flywheel) with aligning marks. Turn the flywheel clockwise and stop at 20 degrees BTDC or 65.5" – 66.5" BTDC on your indicator. Make another mark on the block casting that aligns with your mark on the flywheel.
- B. Remove dial indicator so it will not be damaged by engine rotation.
- C. Install timing light to a battery, if not self powered, and clamp inductive pickup to spark plug wire. Wire should be hooked to standard spark plug gapped to 0.025". Using a drill, with an extension that is cut off or turned to fit drill, place socket on flywheel nut and rotate engine in clockwise direction.
- D. Fire the timing light and observe. If the reference mark on the flywheel is between the two marks on block casting that are TDC and 66.5" or 20 degrees BTDC, the timing is legal. If mark is not between marks on block casting when rotating, the engine will be disqualified.
- E. Other pictures and text indicate methods of detecting which particular part is not in spec.

Tech officials have the right to tech any or all cars in any class at their discretion. Tech Officials follow the same chain of command as all officers of QMA – as follows: Local – Regional – National I.E. Regional tech officials can tech at any event at their region and National Tech Officials can tech at any event in QMA. National Tech Director is final authority on all tech issues.

DECIMAL EQUIVALENTS OF NUMBER SIZE DRILLS

| No. | Size in Decimals |
|-----|---------------------|-----|---------------------|-----|---------------------|-----|---------------------|
| 1 | .2280 | 21 | .1590 | 41 | .0960 | 61 | .0390 |
| 2 | .2210 | 22 | .1570 | 42 | .0935 | 62 | .0380 |
| 3 | .2130 | 23 | .1540 | 43 | .0890 | 63 | .0370 |
| 4 | .2090 | 24 | .1520 | 44 | .0860 | 64 | .0360 |
| 5 | .2055 | 25 | .1495 | 45 | .0820 | 65 | .0350 |
| 6 | .2040 | 26 | .1470 | 46 | .0810 | 66 | .0330 |
| 7 | .2010 | 27 | .1440 | 47 | .0785 | 67 | .0320 |
| 8 | .1990 | 28 | .1405 | 48 | .0760 | 68 | .0310 |
| 9 | .1960 | 29 | .1360 | 49 | .0730 | 69 | .0292 |
| 10 | .1935 | 30 | .1285 | 50 | .0700 | 70 | .0280 |
| 11 | .1910 | 31 | .1200 | 51 | .0670 | 71 | .0260 |
| 12 | .1890 | 32 | .1160 | 52 | .0635 | 72 | .0250 |
| 13 | .1850 | 33 | .1130 | 53 | .0595 | 73 | .0240 |
| 14 | .1820 | 34 | .1110 | 54 | .0550 | 74 | .0225 |
| 15 | .1800 | 35 | .1100 | 55 | .0520 | 75 | .0210 |
| 16 | .1770 | 36 | .1065 | 56 | .0465 | 76 | .0200 |
| 17 | .1730 | 37 | .1040 | 57 | .0430 | 77 | .0180 |
| 18 | .1695 | 38 | .1015 | 58 | .0420 | 78 | .0160 |
| 19 | .1660 | 39 | .0995 | 59 | .0410 | 79 | .0145 |
| 20 | .1610 | 40 | .0980 | 60 | .0400 | 80 | .0135 |

- END -